HOW TO MEASURE YOUR HELMET SIZE:




Your helmet is your #1 protection – make sure your helmet fits!







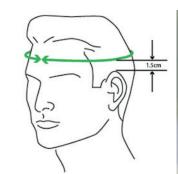

HOW TO MEASURE YOUR HELMET SIZE:

Measure the circumference around your head by keeping a tape measure level and firm above your ears and eyebrows.

If you find yourself between sizes you should opt for the smaller helmet size, as the interior helmet padding will give way rather quickly.



> ARAI CK-6 JUNIOR HELMET

SIZE	CM
XXS	50 - 51
XS	52 - 53
S	54 - 56
М	57 - 58
L	59 - 60

If you have any questions please contact RACEDEAL



> ARAI SK-6 SENIOR HELMET

SIZE	CM
XS	53 - 54
S	55 - 56
М	57 - 58
L	59 - 60
XL	61 - 62

Phone: (02) 4735 1344 / Email: info@racedeal.com.au